




Fitting Instructions – WB4465 3 Litre Waste with Alarm (3300 / 88 / 98)


1. Drill a 9.5mm hole through the drip tray spigot.




2. Connect silicon pipe to spigot on the rear of the coolers top front panel and secure with cable tie. Then connect John Guest waste pipe to silicon tube and secure with cable tie (as illustrated).

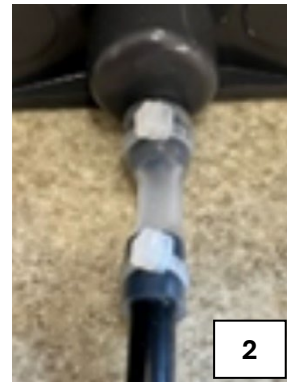

3. Ensure O-Ring is fitted to the drip tray spigot.

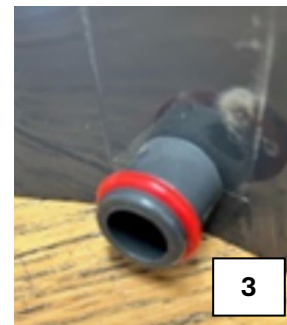

4. Fit metal angle bracket to the front filter bracket to create a shelf for the 3 Litre waste bottle.

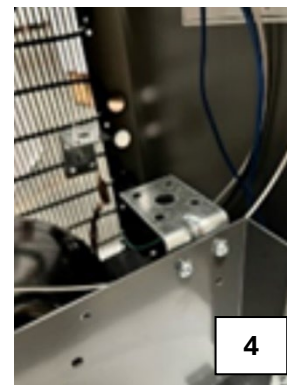

AA First is a division of Circon Ltd: Registered in England 5121722

European HQ:

Cedar House
Grange Farm
Long Lane
Newbury
RG14 2TF

T: + 44 (0) 1635 202489
E: enquiries@aafirst.co.uk
W: aafirst.co.uk

French HQ:

T: +33 (0) 674437445
E: derek@aafirst.eu
W: aafirst.fr


T: +33 (0) 640650708
E: lesley@aafirst.eu
W: aafirst.de

W: aafirst.de
W: aafirst.eu



AAFIRST
WATER COOLERS
& BOILERS
Quality – Reliability – Integrity

- Place the 3 Litre waste bottle on the shelf and secure it with Velcro to the side panel. The waste bottle comes pre-fitted with an alarm and contact probes. Test the alarm by touching both probes.

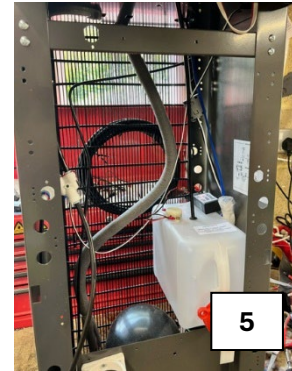

- Empty the waste bottle through the tap on the front. It is recommended that the waste bottle is sanitised by pouring sanitising solution into the drip tray and allowing it to flow into the bottle.

Fitting Instructions – WB4465 3 Litre Waste with Alarm (108 / 109 / 55)



Locate the spigot housing
And drill out the centre hole
To 7mm



Insert the grommet into the
7mm hole from the back of
The panel



Insert the drainage pipe
Into the hole in the grommet

AA First is a division of Circon Ltd: Registered in England 5121722
European HQ:

Cedar House
Grange Farm
Long Lane
Newbury
RG14 2TF
T: + 44 (0) 1635 202489
E: enquiries@aafirst.co.uk
W: aafirst.co.uk

French HQ:

T: +33 (0) 674437445
E: derek@aafirst.eu
W: aafirst.fr
T: +33 (0) 640650708
E: lesley@aafirst.eu
W: aafirst.de
W: aafirst.eu

